



Full credit is given to the above companies including the Operating System (OS) that this PDF file was generated!

Rocky Enterprise Linux 9.2 Manual Pages on command 'pccardctl.8'

\$ man pccardctl.8

PCCARDCTL(8) System Manager's Manual PCCARDCTL(8)

NAME

- pccardctl - PCMCIA card control utility
- lspcmcia - display extended PCMCIA debugging information

SYNOPSIS

- pccardctl [-V] [-v ...] command [socket]
- lspcmcia [-V] [-v ...] [socket]

DESCRIPTION

pccardctl is used to monitor and control the state of PCMCIA sockets. If a socket number is specified, the command will be applied to just one socket; otherwise, all sockets will be affected.

If pccardctl is executed by root, all commands are available. If it is executed by an unprivileged user, only the informational commands are accessible.

lspcmcia is an alias for pccardctl ls, provided for convenience.

COMMANDS

- status
Display the current socket status flags.
- config
Display the socket configuration, including power settings, interrupt and I/O window settings, and configuration registers. --not yet implemented
- ident
Display card identification information, including product identification strings, manufacturer ID codes, and function ID codes. Not yet implemented for cardbus cards.

Use lspci instead.

info

Much like the ident command, but its output is formatted as a series of Bourne-style shell variable definitions for use in scripts. Not yet implemented for cardbus cards.

ls Display extended debugging information about the PCMCIA sockets and devices present in the system.

suspend

Shut down and then disable power for a socket.

resume

Restore power to a socket, and re-configure for use.

eject

Notify all client drivers that this card will be ejected, then cut power to the socket.

insert

Notify all client drivers that this card has just been inserted.

OPTIONS

-V Show version information and exit.

-v Increase the verbosity of the ls command. Giving this option twice increases verbosity further.

AUTHOR

Daniel Ritz - daniel.ritz@gmx.ch

based upon the original cardctl man page by

David Hinds - dahinds@users.sourceforge.net

pcmciautils

2005/10/22

PCCARDCTL(8)