



Full credit is given to the above companies including the OS that this PDF file was generated!

Red Hat Enterprise Linux Release 9.2 Manual Pages on 'nvme-transcend-badblock.1' command

\$ man nvme-transcend-badblock.1

NVME-TRANSCEND-BAD(1) NVMe Manual NVME-TRANSCEND-BAD(1)

NAME

nvme-transcend-badblock - Retrieve Transcend NVMe device's bad blocks.

SYNOPSIS

nvme transcend badblock <device>

DESCRIPTION

For the NVMe device given, sends the Transcend vendor command and return the bad block of the device.

The <device> parameter is mandatory and may be either the NVMe character device (ex: /dev/nvme0), or a namespace block device (ex: /dev/nvme0n1).

On success, the returned value would print the amount of bad blocks.

OPTIONS

none

EXAMPLES

? Print the Transcend device's bad blocks in a human readable format:

```
# nvme transcend badblock /dev/nvme0
```

NVME

Part of the nvme-user suite

NVMe 06/23/2023 NVME-TRANSCEND-BAD(1)