



*Full credit is given to the above companies including the OS that this PDF file was generated!*

## **Red Hat Enterprise Linux Release 9.2 Manual Pages on 'nvme-transcend-healthvalue.1' command**

### **\$ man nvme-transcend-healthvalue.1**

NVME-TRANSCEND-HEA(1)      NVMe Manual      NVME-TRANSCEND-HEA(1)

#### NAME

nvme-transcend-healthvalue - Use NVMe SMART table to analyze the health value of Transcend device.

#### SYNOPSIS

nvme transcend healthvalue <device>

#### DESCRIPTION

Retrieves the NVMe Device SMART log page from the Transcend device and evaluate health status of Transcend device.

The <device> parameter is mandatory and may be either the NVMe character device (ex: /dev/nvme0), or a namespace block device (ex: /dev/nvme0n1).

On success, the returned value would print health percentage value.

#### OPTIONS

none

#### EXAMPLES

? Print the Transcend Device health value in a human readable format:

```
# nvme transcend healthvalue /dev/nvme0
```

#### NVME

Part of the nvme-user suite

NVMe                      06/23/2023                      NVME-TRANSCEND-HEA(1)