



Full credit is given to the above companies including the OS that this PDF file was generated!

Rocky Enterprise Linux 9.2 Manual Pages on command 'iprint.8'

\$ man iprint.8

IPRINIT(8) System Manager's Manual IPRINIT(8)

NAME

iprint - IBM Power RAID adapter/device initialization utility

SYNOPSIS

iprint

iprint --debug --daemon --use-polling --use-uevents

DESCRIPTION

iprint is used to setup IBM Power RAID adapters and devices for optimal performance. It will enable U320 scsi speeds if it is determined the disk enclosure supports it. It will also enable tagged command queuing. Any scsi bus attributes, such as bus width, or disk attributes, such as queue depth, that have been setup by iprconfig will be loaded as well. It is desired that this be called in the boot process, using the init.d script provided.

OPTIONS

--version

Print the version number of iprint

--debug

Enable additional error logging. Enabling this will result in additional errors logging to `/var/log/messages`.

`--daemon`

Run as a daemon to handle adapters and devices being hotplugged.

`--use-polling`

Do not use netlink/uevent notification, but rather poll for adapter and device configuration changes.

`--use-uevents`

Use netlink/uevent notification rather than polling for adapter and device configuration changes. If not specified, polling will be used until the first uevent notification appears, then netlink will be used.

AUTHOR

Brian King (brking@us.ibm.com)

February 2005

IPRINIT(8)