



Full credit is given to the above companies including the OS that this PDF file was generated!

Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-netapp-ontapdevices.1'

\$ man nvme-netapp-ontapdevices.1

NVME-NETAPP-ONTAPD(1) NVMe Manual NVME-NETAPP-ONTAPD(1)

NAME

nvme-netapp-ontapdevices - Display information about ONTAP devices

SYNOPSIS

nvme netapp ontapdevices [-o <fmt> | --output-format=<fmt>]

DESCRIPTION

Display information about ONTAP devices on the host. The ONTAP devices are identified using the Identify Controller data.

OPTIONS

-o <fmt>, --output-format=<fmt>

Set the reporting format to normal (default), column, or json. Only one output format can be used at a time.

EXAMPLES

? Display information, in a column-based format, for ONTAP devices.

```
# nvme netapp ontapdevices -o column
```

NVME

Part of the nvme-user suite

NVMe	06/23/2023	NVME-NETAPP-ONTAPD(1)
------	------------	-----------------------