



*Full credit is given to the above companies including the OS that this PDF file was generated!*

### ***Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-seagate-get-ctrl-tele.1'***

**\$ man nvme-seagate-get-ctrl-tele.1**

NVME-SEAGATE-GET-(1)      NVMe Manual      NVME-SEAGATE-GET-(1)

#### NAME

nvme-seagate-get-ctrl-tele - Retrieve Seagate Controller-Initiated Telemetry in either hex-dump (default) or binary format

#### SYNOPSIS

nvme seagate get-ctrl-tele <device> [OPTIONS]

#### DESCRIPTION

This command will only work on Seagate devices supporting this feature.

Not all commands work across all product families.

The '<device>' parameter is mandatory and may be either an NVMe character device (ex: /dev/nvme0) or an nvme block device (ex: /dev/nvme0n1).

#### OPTIONS

-n <NUM>, --namespace-id=<NUM>

Desired namespace

-b, --raw-binary

Output in raw format

#### EXAMPLES

Get the controller initiated telemetry log in hexdump or binary format for the specified device.

```
# nvme seagate get-ctrl-tele /dev/nvme0
```

NVME

Part of the nvme-user suite

NVMe                    06/23/2023            NVME-SEAGATE-GET-(1)