



Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-seagate-get-host-tele.1'

\$ man nvme-seagate-get-host-tele.1

NVME-SEAGATE-GET-(1) NVMe Manual NVME-SEAGATE-GET-(1)

NAME

nvme-seagate-get-host-tele - Retrieve Seagate Host-Initiated Telemetry
in either hex-dump (default) or binary format

SYNOPSIS

nvme seagate get-host-tele <device> [OPTIONS]

DESCRIPTION

This will only work on Seagate devices supporting this feature. Not all
commands work across all product families.

The <device> parameter is mandatory and may be either an NVMe character
device (ex: /dev/nvme0) or an nvme block device (ex: /dev/nvme0n1).

OPTIONS

-n <NUM>, --namespace-id=<NUM>
desired namespace

-i <NUM>, --log_specific=<NUM>

1 - controller shall capture Data representing the internal state
of the controller at the time the command is processed. 0 -
controller shall not update the Telemetry Host Initiated Data.

-b, --raw-binary

output in raw format

EXAMPLES

Get the host initiated telemetry log in hexdump or binary format for the specified device.

```
# nvme seagate get-host-tele /dev/nvme0
```

NVME

Part of the nvme-user suite

NVMe 06/23/2023 NVME-SEAGATE-GET-(1)