



Full credit is given to the above companies including the OS that this PDF file was generated!

Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-wdc-capabilities.1'

\$ man nvme-wdc-capabilities.1

NVME-WDC-CAPABILIT(1) NVMe Manual NVME-WDC-CAPABILIT(1)

NAME

nvme-wdc-capabilities - Display WDC plugin command capabilities

SYNOPSIS

nvme wdc capabilities <device>

DESCRIPTION

For the NVMe device given, displays list of commands and support status.

The <device> parameter is mandatory NVMe character device (ex: /dev/nvme0).

On success it returns 0, error code otherwise.

EXAMPLES

? Displays the capabilities for the device:

```
# nvme wdc capabilities /dev/nvme0
```

NVME

Part of the nvme-user suite.

NVMe 06/23/2023 NVME-WDC-CAPABILIT(1)