



*Full credit is given to the above companies including the OS that this PDF file was generated!*

### ***Rocky Enterprise Linux 9.2 Manual Pages on command 'nvme-write-uncor.1'***

**\$ man nvme-write-uncor.1**

NVME-UNCOR(1)                    NVMe Manual                    NVME-UNCOR(1)

#### NAME

nvme-write-uncor - Send an NVMe write uncorrectable command, return results

#### SYNOPSIS

```
nvme-write-uncor <device> [--start-block=<slba> | -s <slba>]
                        [--block-count=<nlb> | -c <nlb>]
                        [--namespace-id=<nsid> | -n <nsid>]
                        [--force]
```

#### DESCRIPTION

The Write Uncorrectable command is used to invalidate a range of logical blocks.

#### OPTIONS

--start-block=<slba>, -s <slba>

Start block.

--block-count=<nlb>, -c

Number of logical blocks to write uncorrectable.

--namespace-id=<nsid>, -n <nsid>

Namespace ID use in the command.

--force

Ignore namespace is currently busy and performed the operation even though.

#### EXAMPLES

No examples yet.

#### NVME

Part of the nvme-user suite

|      |            |               |
|------|------------|---------------|
| NVMe | 06/23/2023 | NVME-UNCOR(1) |
|------|------------|---------------|